


Interior lights list

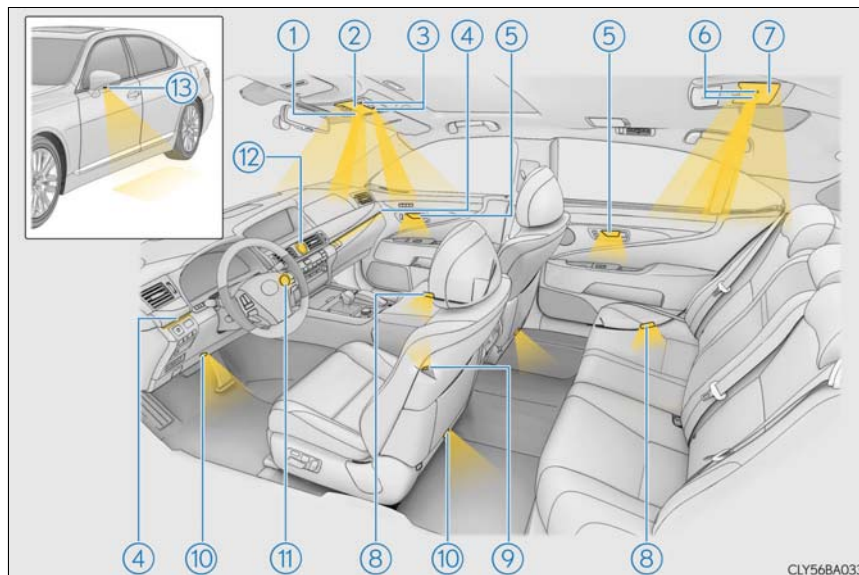


- | | |
|------------------------------------|---------------------------------|
| ① Front interior lights (→P. 666) | ⑦ Rear interior light (→P. 666) |
| ② Shift lever lights | ⑧ Door courtesy lights |
| ③ Front personal lights (→P. 667) | ⑨ Seat belt buckle lights |
| ④ Instrument panel ornament lights | ⑩ Footwell lights |
| ⑤ Inside door handle lights | ⑪ Engine switch light |
| ⑥ Rear personal lights (→P. 667) | ⑫ Clock light |
| | ⑬ Outer foot lights |

Interior lights

► Front


- ① "OFF"
- ② Door position on/off
- ③ "ON"

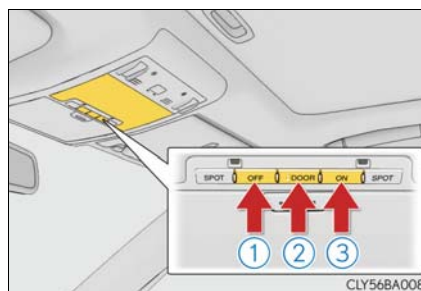

► Rear

On/off


If door position on is selected for the front interior light, the rear interior light is also turned on/off by the opening and closing of a door.

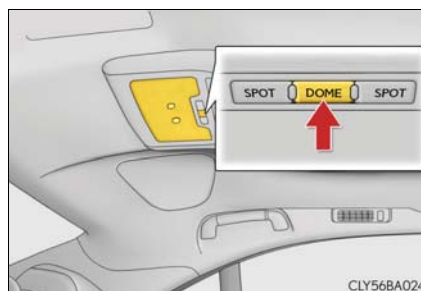

Personal lights


► Front

On/off

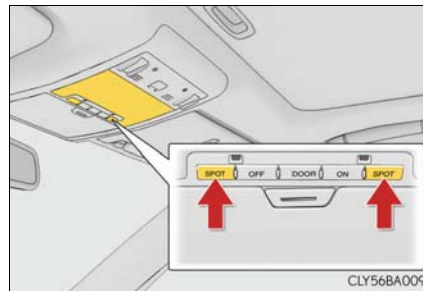


► Rear (vehicles without rear seat entertainment system)

On/off

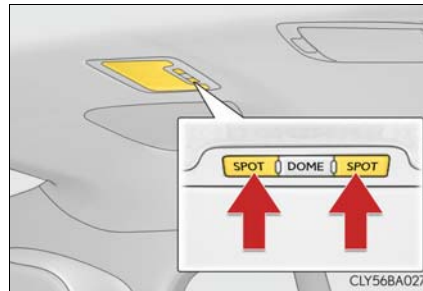

► Rear (vehicles with rear seat entertainment system)

- ① On/off
- ② Press the knob to release it, and turn the knob to the desired brightness.
- ③ Darker
- ④ Brighter

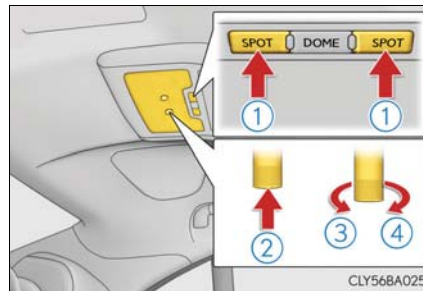

5

Interior features

■ Illuminated entry system

The lights automatically turn on/off according to engine switch mode, the presence of the electronic key, whether the doors are locked/unlocked, and whether the doors are opened/closed.

■ To prevent the battery from being discharged

If the following lights remain on when the engine switch is turned off, the lights will go off automatically after 20 minutes:

- Interior lights
- Door courtesy lights
- Personal lights
- Inside door handle lights
- Seat belt buckle lights
- Footwell lights
- Engine switch light

■ Customization

Settings (e.g. The time elapsed before lights turn off) can be changed.
(Customizable features →P. 872)

**NOTICE****■ To prevent battery discharge**

Do not leave the lights on longer than necessary when the engine is not running.